

Firmware Update of weatronic Dual Receiver

1. Format SD card with FAT16 (under Windows-XP called „FAT“). Don't use FAT32-system. Unlock write protection of SD card and insert in USB cardreader. Format card by clicking in Windows Explorer with right mouse button on correspondent drive, choose FAT in list „Format“ with left mouse button, not FAT32.
2. Copy file FIRMWARE.BIN on SD card. Don't rename FIRMWARE.BIN under no circumstances.
3. Insert SC card into Dual Receiver without connecting to batteries or to computer (neither batteries nor USB bord is allowed to connect).
4. Switch on Dual Receiver by means of USB connection to computer). Log LED (red) blinks for some seconds. Hereafter all LEDs start blinking for a while. When all LEDs have stopped lighting update was successful.
5. Take SD card out of slot and switch off Dual Receiver.
6. If you need to update more units, continue with step 3.

Possible problems

In some rare cases it might happen that update was interrupted and Dual Receiver is unable to update the firmware.

Then follow procedure above – step 1 till 5 - with an older version of firmware first, then with new firmware.